



Fog Light Polished Billet Style

2005-2010



AMERICAN CAR CRAFT INSTRUCTION

2005-2010 Chrysler 300C Fog Light Grille

Part# 302001 Patent Pending



PARTS INCLUDED:


- 2-Stainless Light Grilles
- 1-Adhesive Promoter Pack
- 1-Adhesive Promoter Tube
- 2-Strips of Black Molding W/Grain 20"
- 2-Strips of 1/4" Chrome Molding 20"

1. Prepare the painted surface in front of the fog light by washing it first with soap and water to remove any road dirt and grime then scrub the area with household rubbing alcohol. After the area has been thoroughly cleaned swipe the surface once with the adhesive promoter provided.
2. You will notice that the two stainless grilles have an odd unsymmetrical oval shape to them. This shape is designed to fit perfectly into the contour of the fog light opening. The first step is to place one of the grilles into position and make note of the overall fit and position. The grille diamonds or vertical slats should be pointing upwards to the top of the hole. You will notice that the grille itself will fit just to the outer edge of the hole. Holding the grille in position trace along the edge of the grille with a pen or pencil. Then remove the grille. You should have a complete circle drawn directly on the paint.
3. You have been provided with two strips of black molding. This molding has been provided to create a surface for the new grille cover to attach to. Begin by removing the red release liner from the molding and placing the trim so that it sets in place just UNDER an 1/8th of an inch on the inside of the line that you drew in step 2. Press firmly to set. Now swipe the black trim that you just installed with the adhesive promoter

provided this is the surface where you will be attaching the new cover to.

4. Once the hole has been successfully prepared simply peel the red release liner from the back of the grille and set it into position pressing firmly to set.
5. You have been supplied with two lengths of chrome trim. This trim has been provided to be applied to the outer edge of the fog light hole directly to the paint and up against the new grille you just installed to complete the installation. (What you are doing is installing the stainless cover in between the two strips of molding) Begin by removing the red release liner from the back of the chrome trim then starting at the top center of the ridge and work the trim around the ridge to the start point. Trim off the excess with a scissor but leave a little extra so that you will have to buckle the ends together into a nice tight butt seam. Do not get wet for 24 hours.
6. Repeat steps 1-5 for the opposite side.



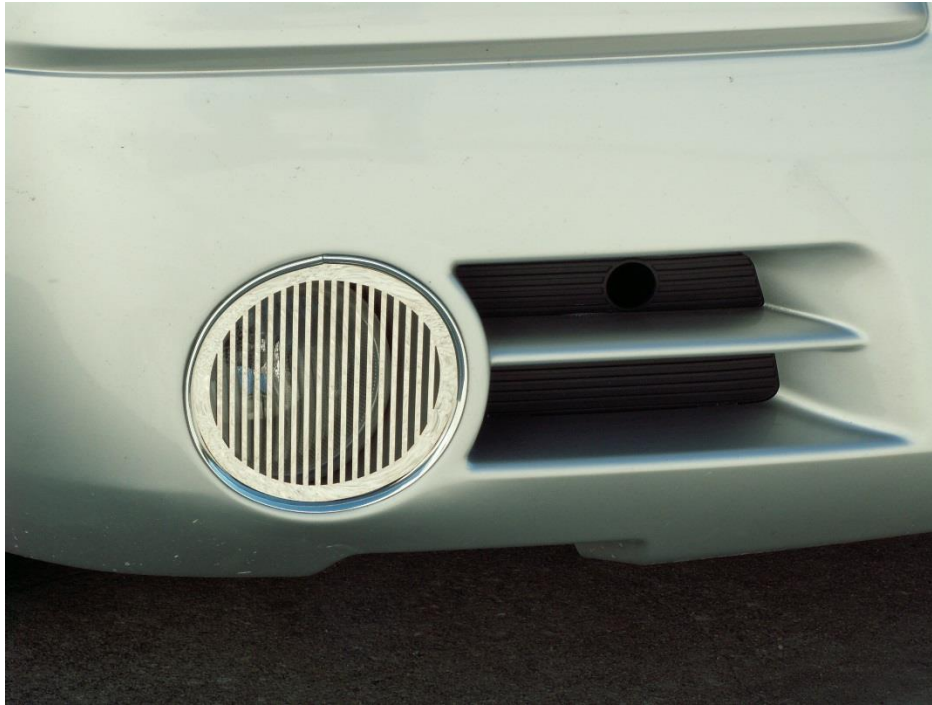

**If any questions occur during installation please contact American Car Craft at
727-861-1500**

Thank you and enjoy your purchase!

**AMERICAN CAR CRAFT
18924 SAKERA ROAD-HUDSON FLORIDA 34667
Phone # 727-861-1500 Fax # 727-861-1520
www.americancarcraft.com**




AMERICAN CAR CRAFT INSTRUCTIONS

How To Use Your 3M Adhesive Promoter Tube

1. Hold the tube with your thumb and fore finger as shown.



2. Apply pressure with your thumb until you hear a “pop” sound.

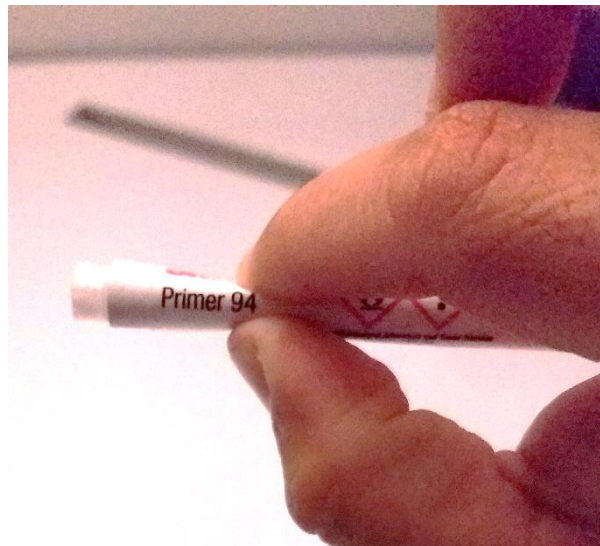

3. Shake the tube back and forth a couple times to get the promoter to flow through the felt tip.
4. Apply to product mounting surface as instructed in the product instructions.

If you need further instruction, below is a link to a video on our YouTube channel.

Type it into your browser exactly as it is below.

<https://youtu.be/vhXVOhBrfN8>